




Fingerarm System – Assembling & Mounting

Example: Double Level

TOOLS REQUIRED




- 1 Dig the hole and mount your posts in position required for your signage.

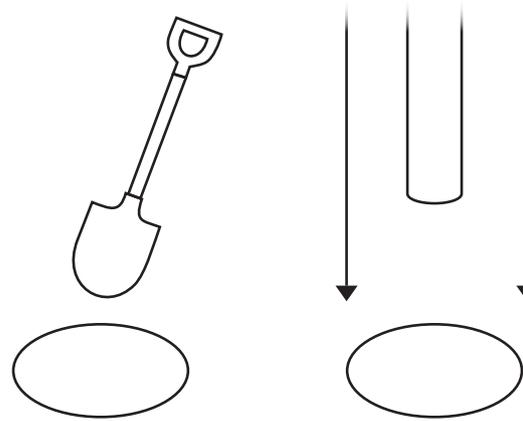

- 2 Slide the Finger arm into the relevant slot and then add the cover plate to cover the inner extrusion on the rest of that level.

Level 1

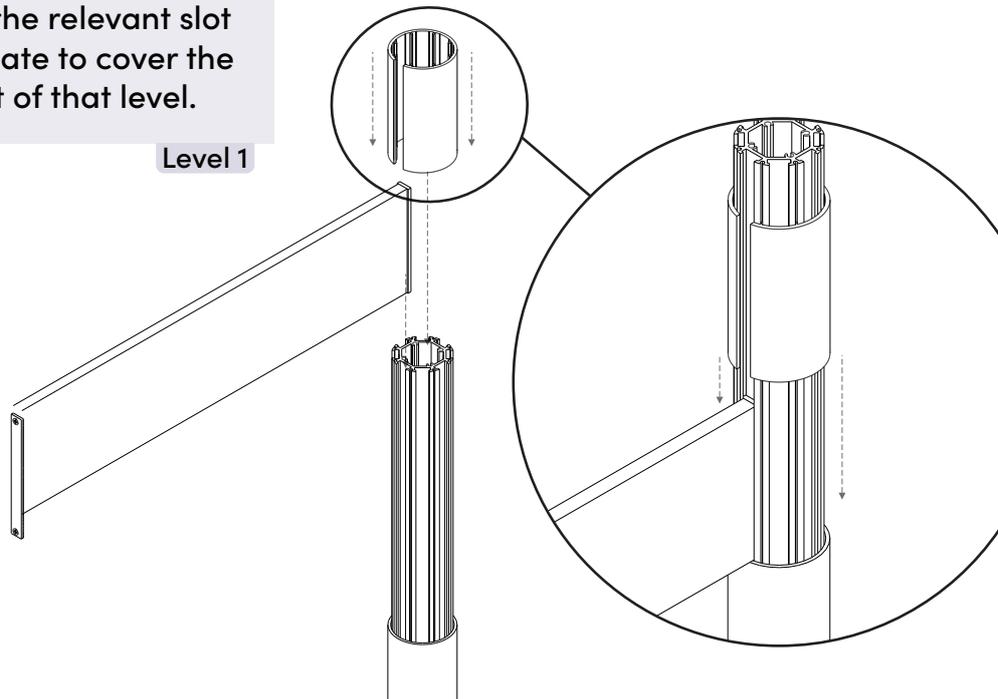




3


Repeat Dia No.2 for level 2 (Cover plates are cut to suit the finger arms being place in certain positions).


Level 2

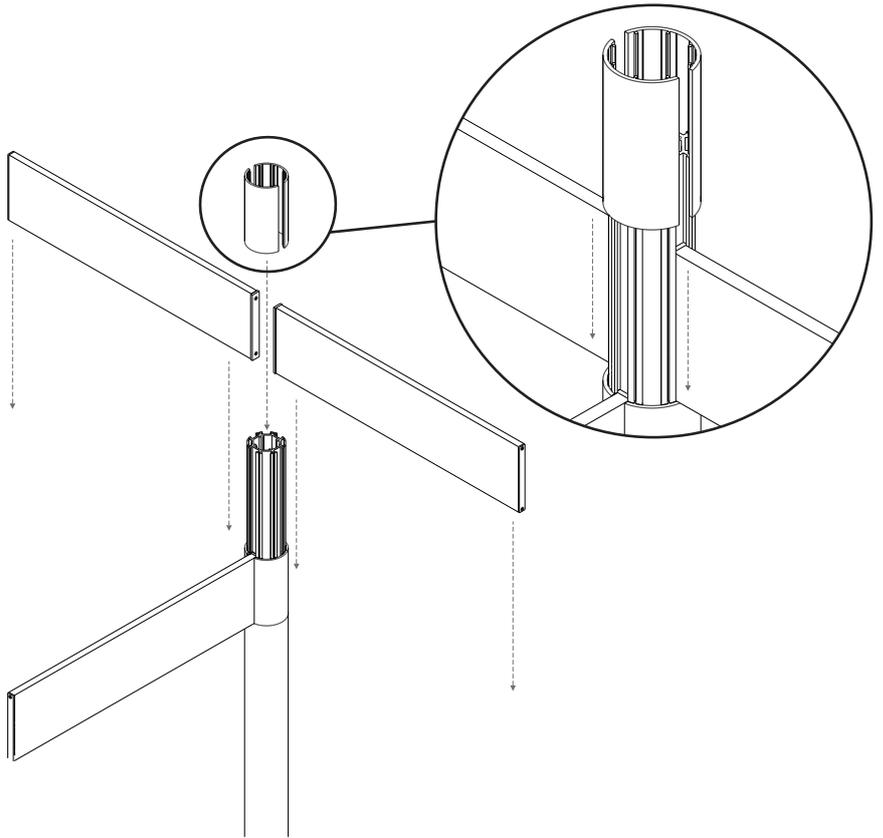

4

Slot the Beacon Cap onto the Extrusion and screw into place (Standard cap is optional with reduced inner extrusion).

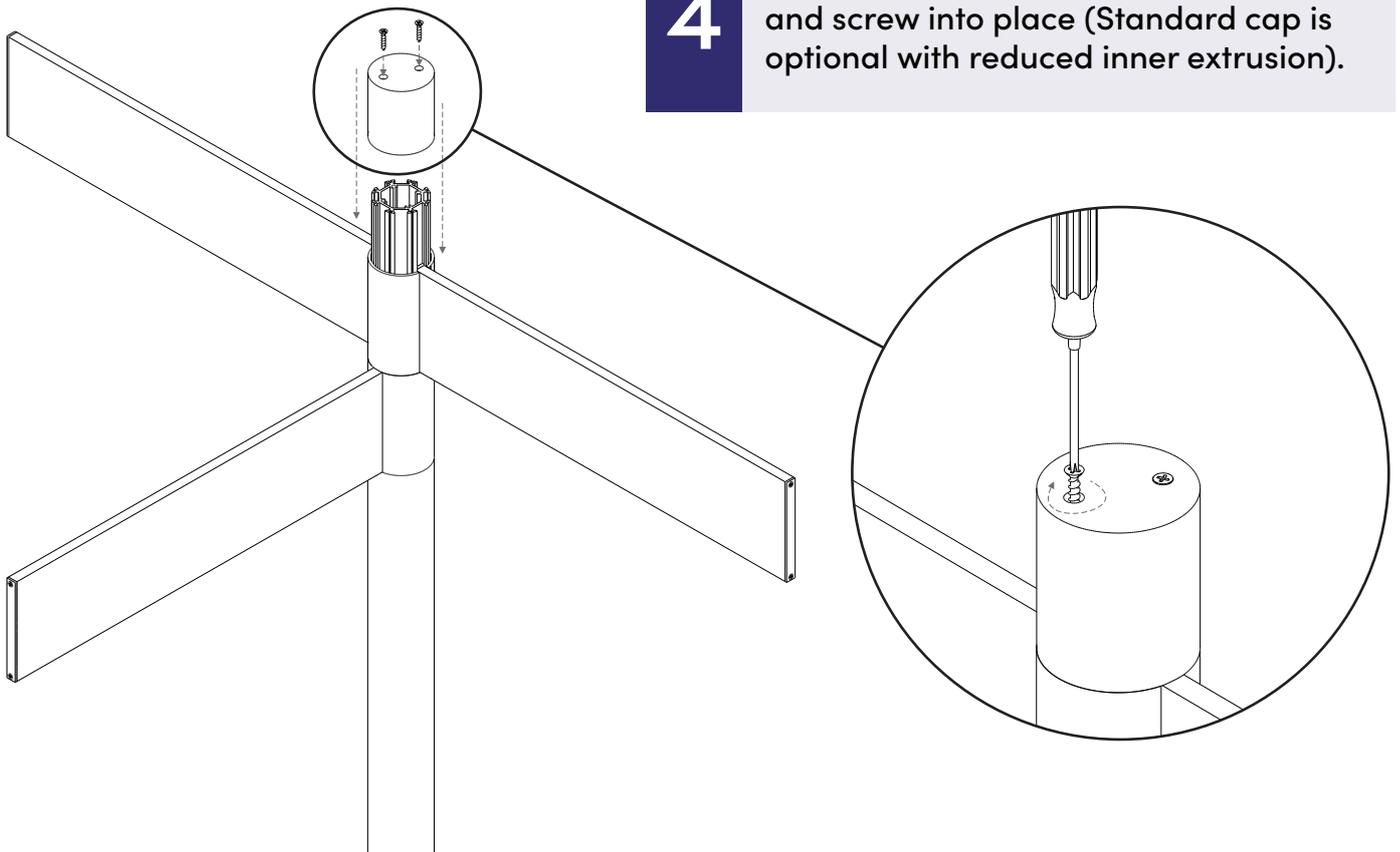

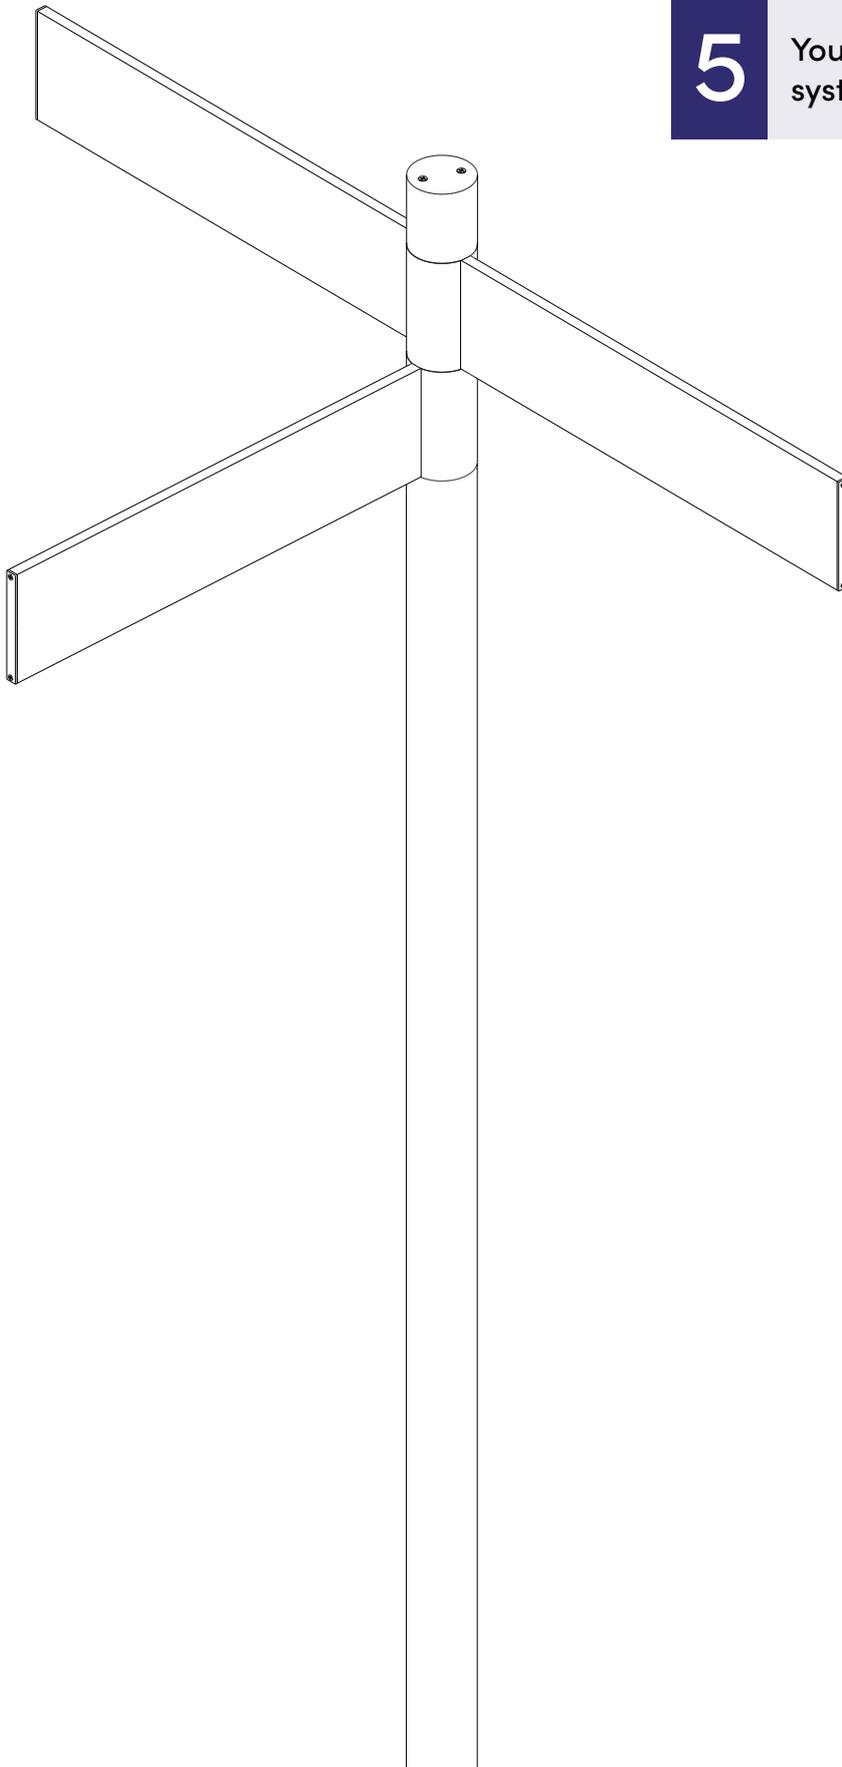

5

Your OCTApoint Finger arm system is now fitted.